


**WIRE
FREE**

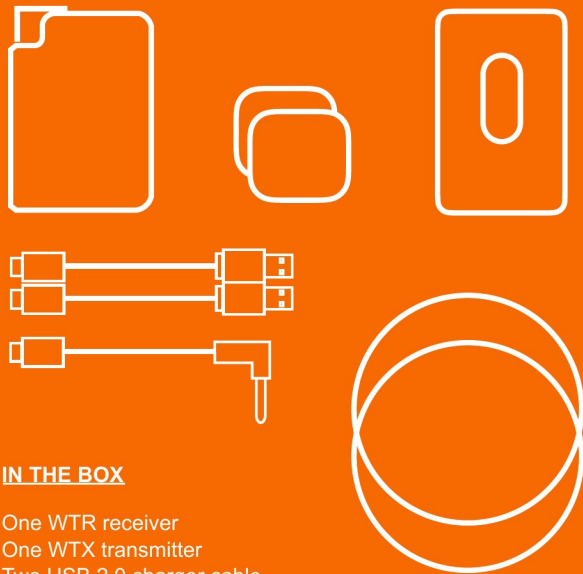

IN THE BOX

One WTR receiver
One WTX transmitter
Two USB 2.0 charger cable
One USB to 6.35mm / 1/4" audio cable
Two elastic bands, two velcro pads , one soft carry case

Quest Metal Detectors

Covina California U.S.A. | Lippenhuizen Netherlands E.U.

info@deteknix.com | info@deteknix-eu.com

WIREFREE MATE



Congratulations on your purchase of the original Wire-Free headphone kit for metal detecting. Before using your headphones for the first time, please take a moment to carefully read the following information.

IMPORTANT-PLEASE READ

**Fully recharge the batteries before using.
Do not expose the devices under direct sunshine.
Do not immerse the devices in any liquid.**

SAFETY INSTRUCTIONS

- When wearing the headphones, make sure the volume is turned to minimum. Only adjust the volume after putting the headphones on. Do not turn the volume up too loud. You could cause permanent damage to your hearing.
- Danger to life! Headphones dramatically reduce your ability to hear ambient noise. Using headphones while in road traffic is potentially very dangerous and is therefore prohibited by law. Also, please make sure that you do not use your headphones when in the vicinity of possibly dangerous machines and tools.
- *This product's wireless 2.4G technology has a transmission range of approx. 10 meters, but interfering obstacles (people, metal objects, walls, etc.), other radio signals, Bluetooth signal and other factors may affect the transmission range or even loss connection.*

1.1 INTRODUCTION

1. Power/Volume/Pair knob.
2. Recharge port
3. LED indication(Staus, Battery)
4. Recharge port
5. LED indication(Status, Battery)
6. Power button
7. Clipper
8. Grooves for elastic band



1.2 POWER ON WTX

Make sure the WTX transmitter is fully charged and press the power button for 1 second. The LED indicator will light up. The battery condition LED will indicate the battery life for 3 seconds. If no paired receiver/headphones in range it will start flashing.




1.3 POWER ON WRX

Make sure the WRX receiver is fully charged and rotate the knob clockwise and the status LED indicator will light up. If you need to volume up just turn further. If no paired transmitter been paired in range it will start flashing.



1.4 TRANSMITTER ATTACHMENT

We provide two methods to attach the transmitter to your detector. For headphone jack on control box, you can clip it on the rod by elastic band. For headphone jack under the arm-rest, you can paste the Velcro pad to attach on the detectors surface.

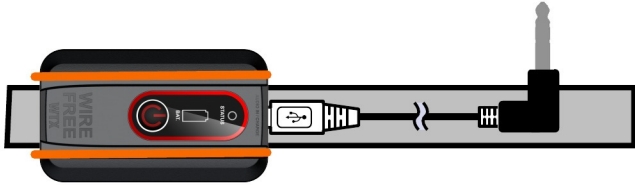

1.5 PAIRING (when necessary)

Each set of Wire-Free Mate have been pre-paired before packing. If you need pair them again please place the headphone to within 10cm of the transmitter, rotate the knob of the WRX on-off-on quickly. The LED indicator of the transmitter will change to steady condition.



2.1 TRANSMITTER RECHARGING

You can recharge it thru smartphone charger(recommend) laptop computer USB port, or power bank for emergency. Plug the USB side into the port and insert the microUSB head on the transmitter's charging port. The battery LED indicator will start to flash. All three green LED will light up when fully charged.

